

Thank you for choosing **CLUBRAX®™** Golf club merchandisers.

To enable you to get the most out of the unique design of CLUBRAX we offer a few tips .

Please keep this sheet for future reference.

 
Fixing tip 1.

The ideal distance between the top & bottom parts is 700mm (27.1/2")This applies to styles CX1 & CX2.

Fixing tip 2.


CX1 only.

It is essential for best display, to align the top & bottom parts so that the clubs lay over at a slight angle. To achieve this, position the two parts either side of an imaginary centre line.(see diagram)

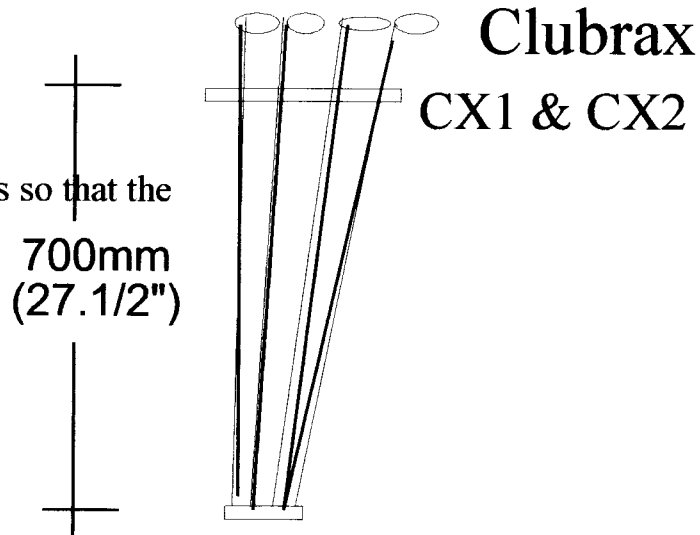

Tip 3.

 The clubrax base is designed to hold the grip in any desired position. Thereby allowing the Soleplate advertising to always face the customer.

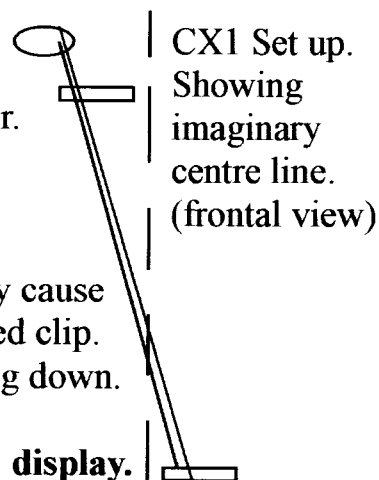

Tip 4.

Slatwall with aluminium inserts. !

Extrusion lines in aluminium inserts occasionally cause difficulty when inserting the CLUBRAX moulded clip.

Fully insert the clip into extrusion before locking down.

CLUBRAX®™ Leading the way in golf club display.

For more information visit us at:-

www.clubrax.com